





MEMOLUB APP USER MANUAL

STEP BY STEP

Install The Memolub App

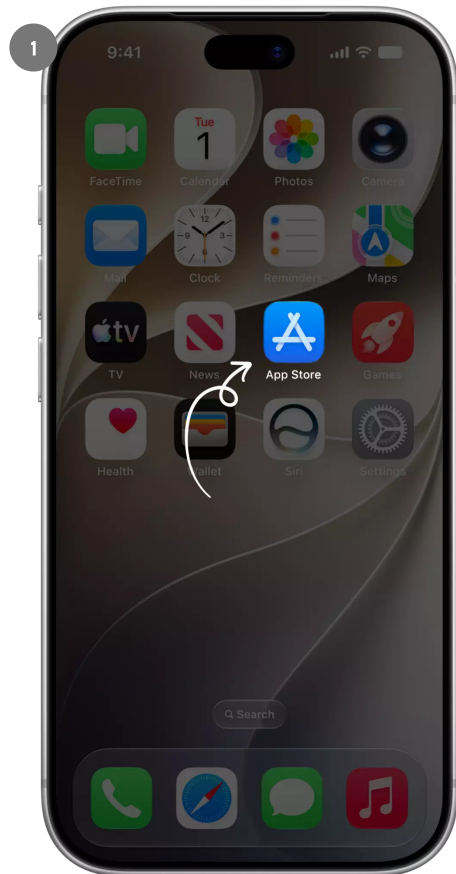


Go to the App Store / Google Play

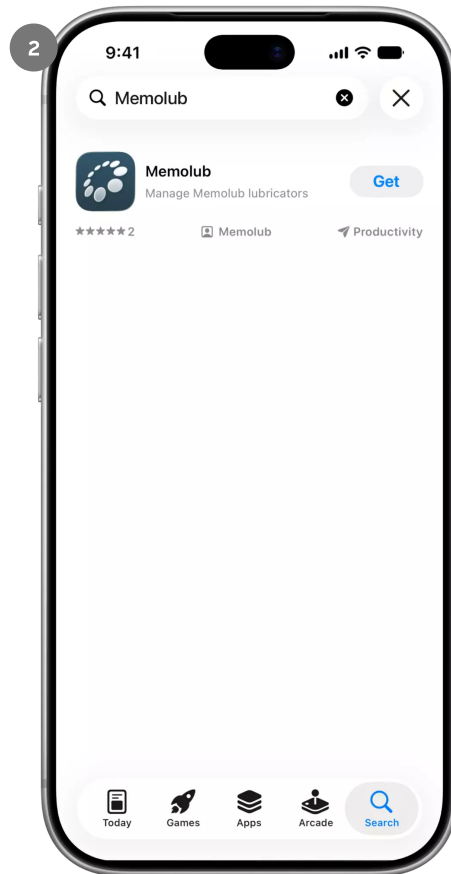


Search for the Memolub app.




Tap the get the app button for immediate installation, tap the App icon for more info.

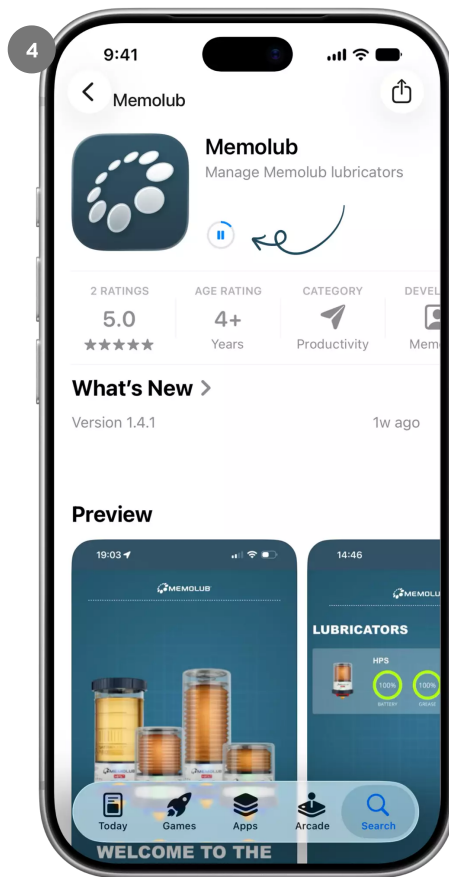

The app downloads and installs automatically.

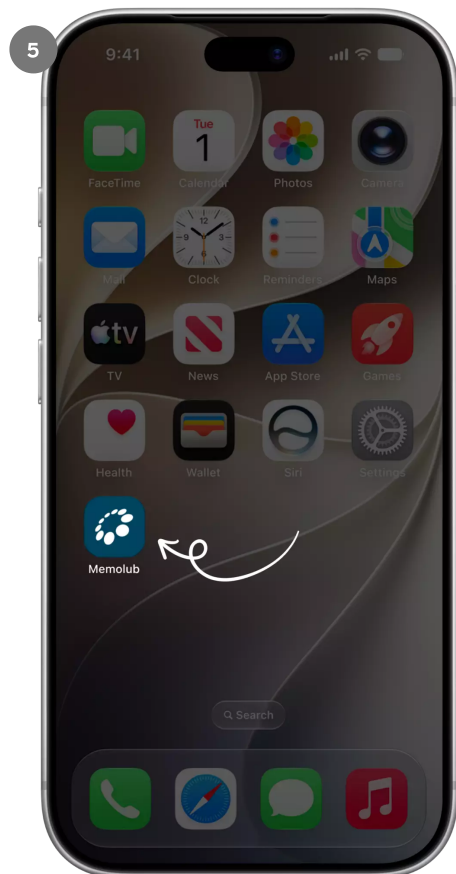


Find the Memolub app on your homescreen.
Tap to open.

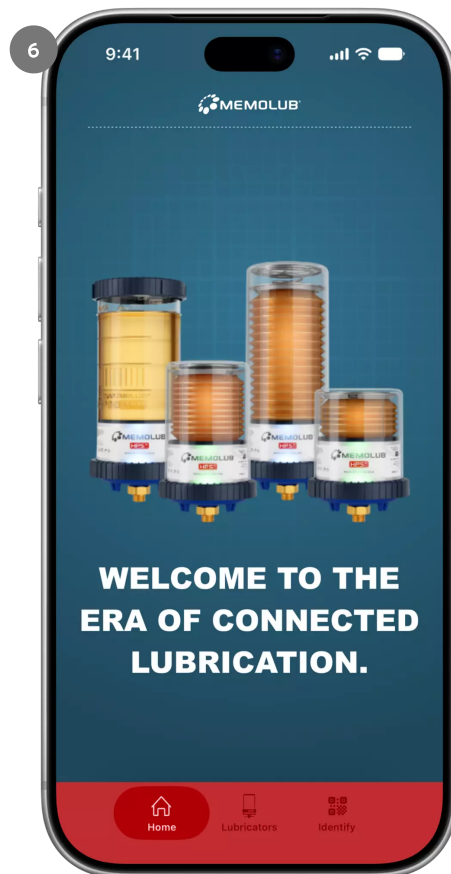


Well done, the app is up and running.



Monitor your lubricators


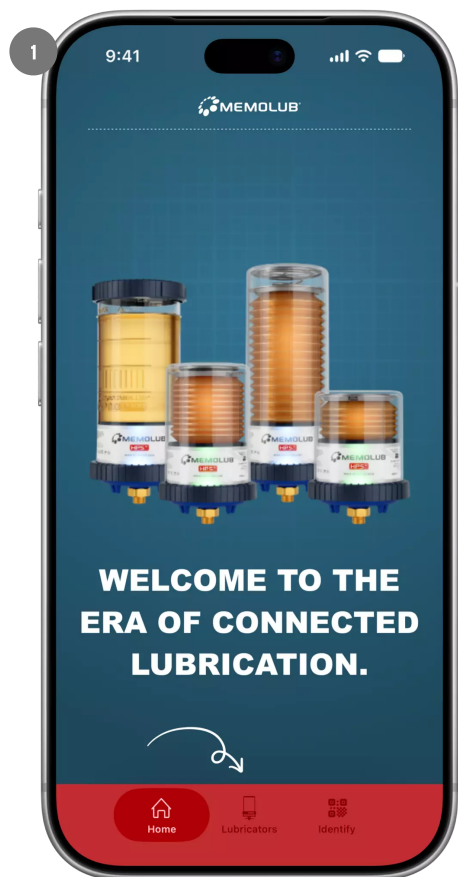


Tab the lubricators tab.

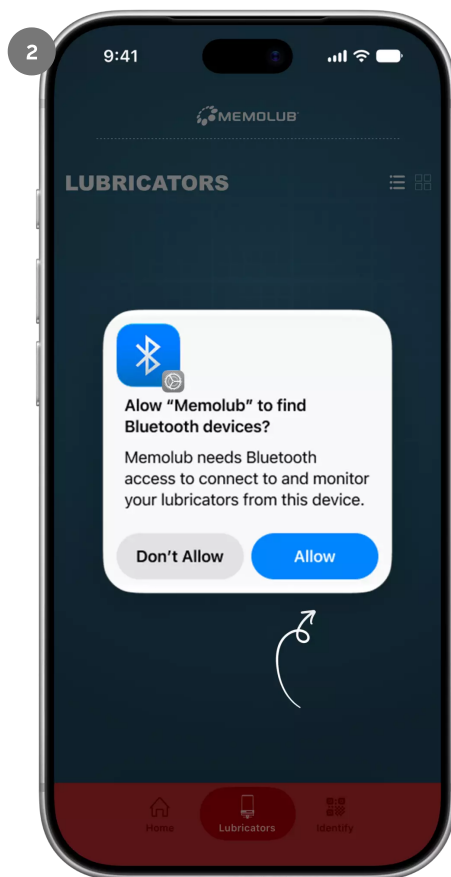


Allow Memolub to find bluetooth devices when launching the app for the very first time.

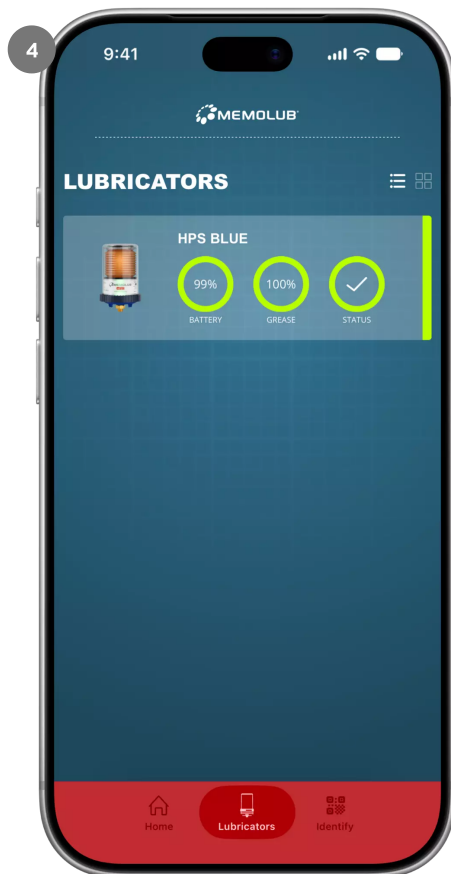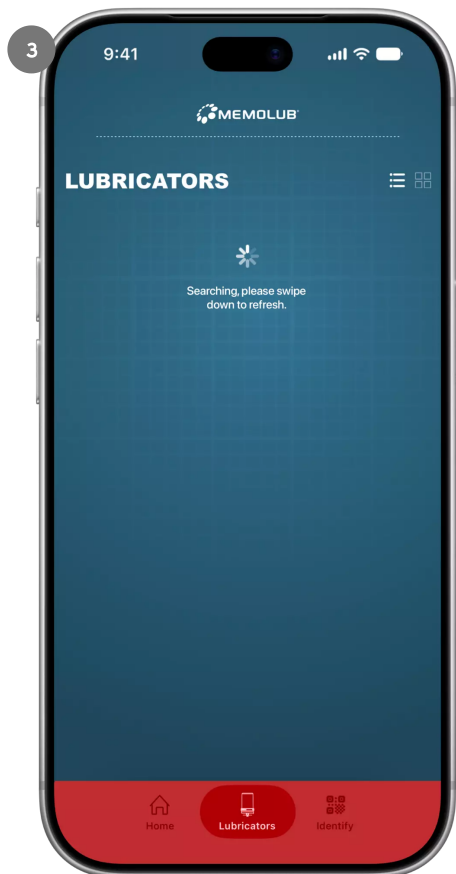


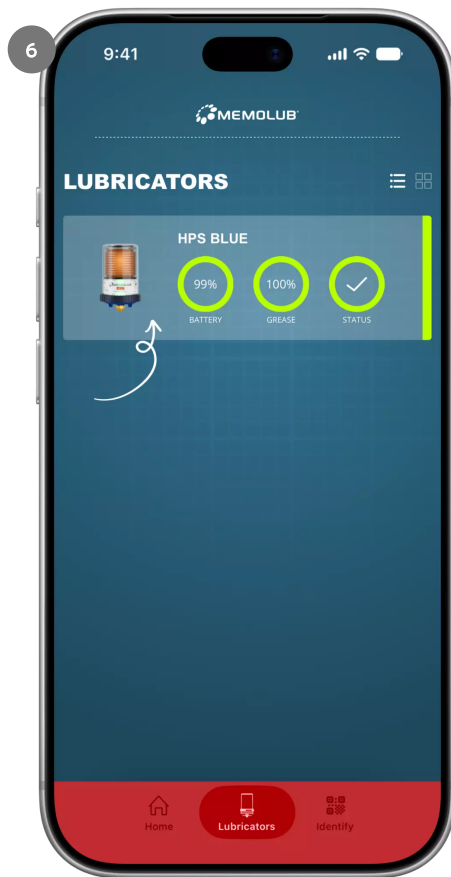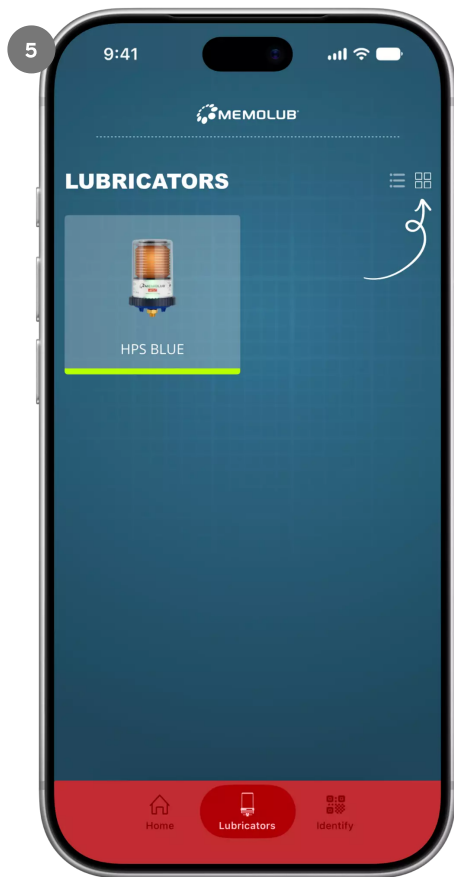


Switch view to tiles.

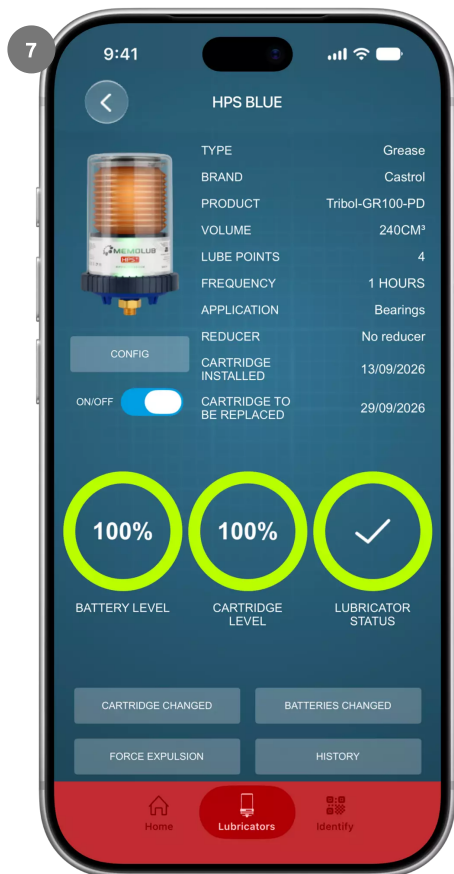


Initial setup of your lubricator

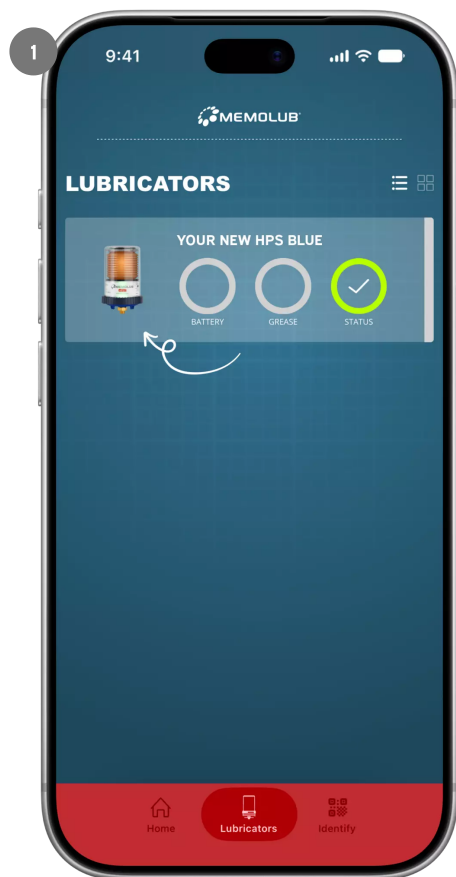


Select your new lubricator from the list.

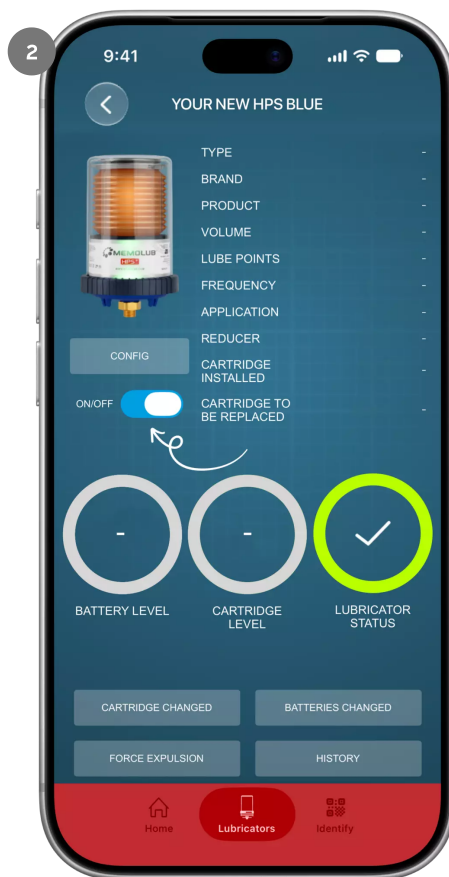


Toggle the lubricator OFF.

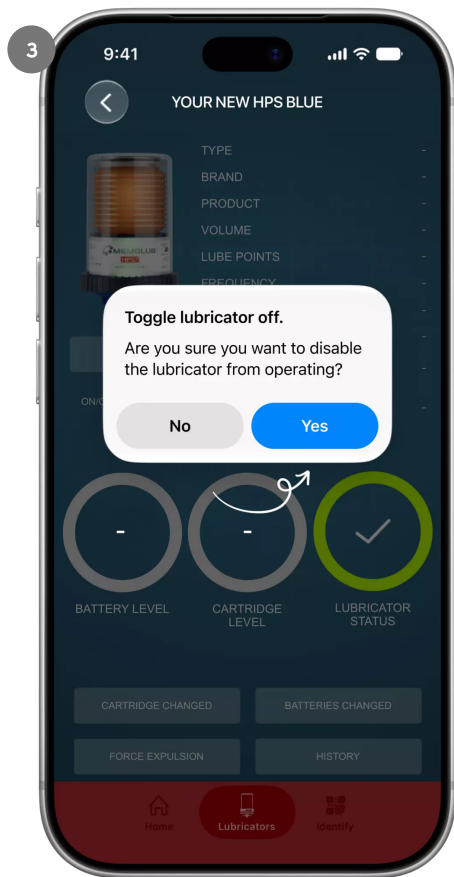


Confirm you want to turn OFF the lubricator.

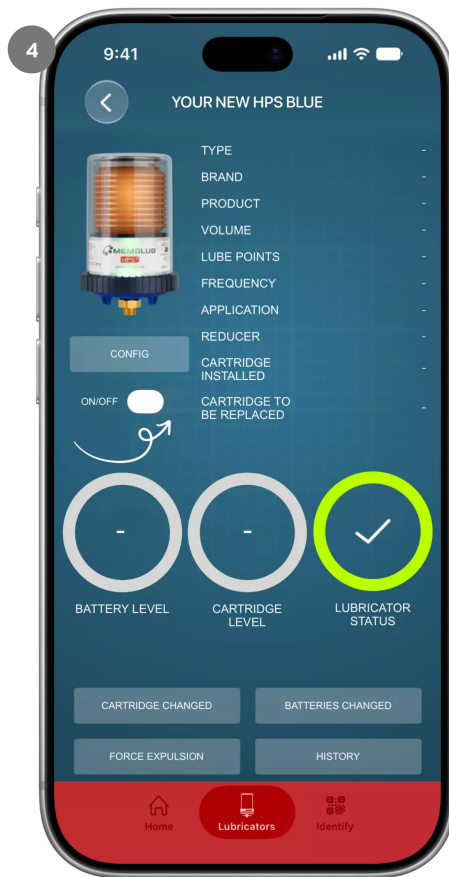


Toggle the lubricator ON.

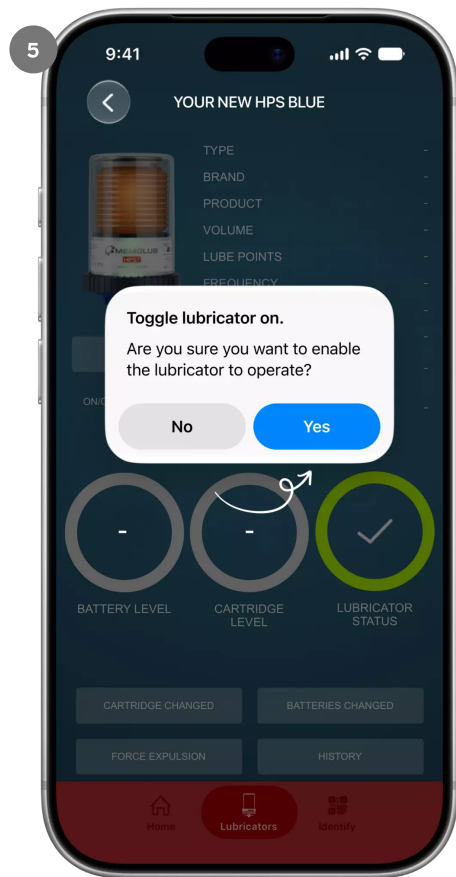


Confirm you want to turn the lubricator ON.

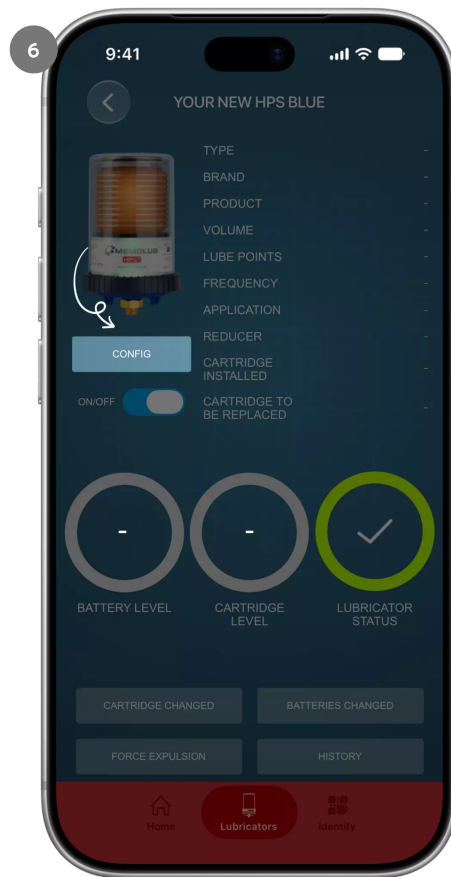


Tap the config button to setup the lubricator.

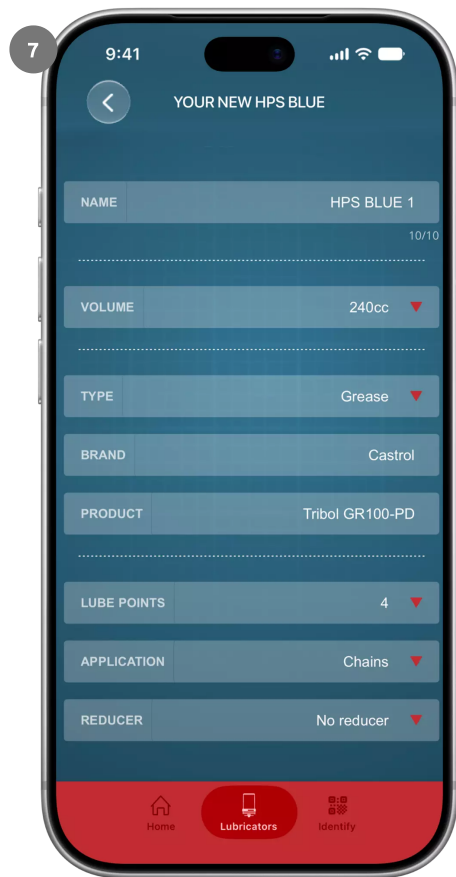


Fill all the details: name, volume, lubricant type, brand, product, lube points, application and the number of installed reducers.

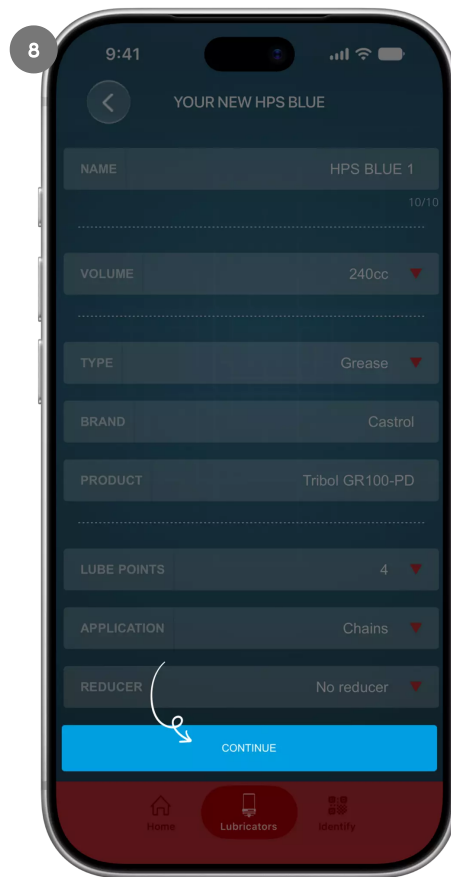


Proceed by tapping "Confirm".

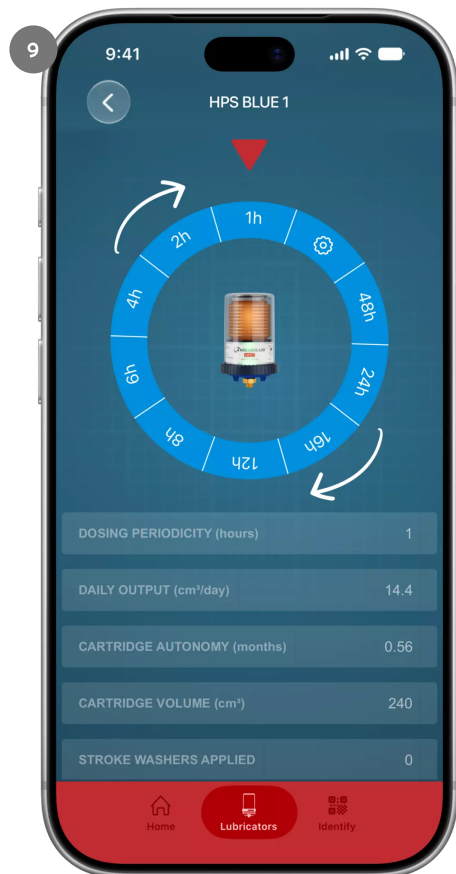


Select your preset frequency setting, or configure one yourself by moving the wheel to the gear icon.

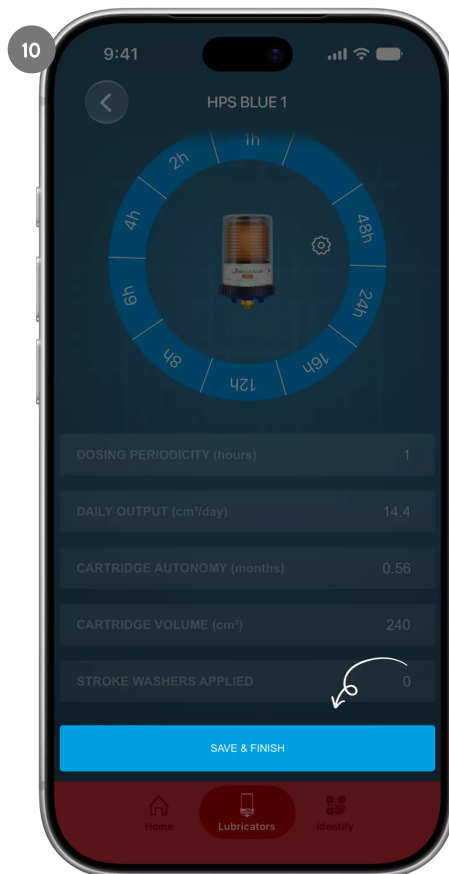


Tap the "Save & Finish".

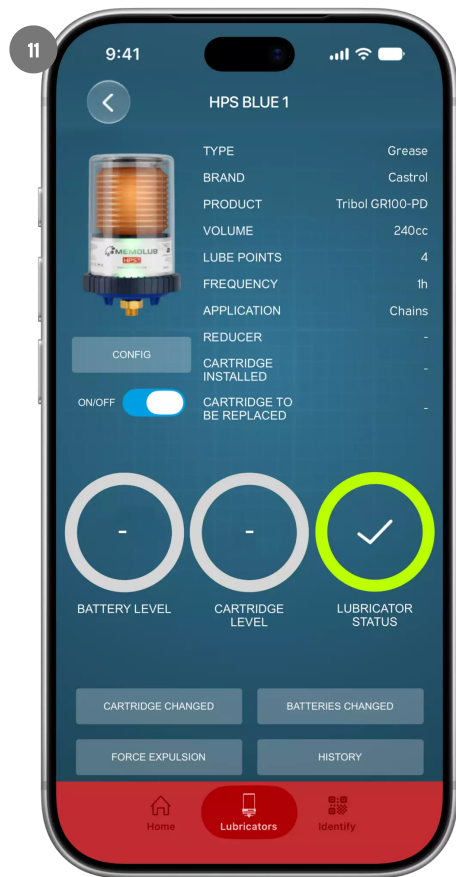


The lubricator is set now, but there are 2 more things to do.

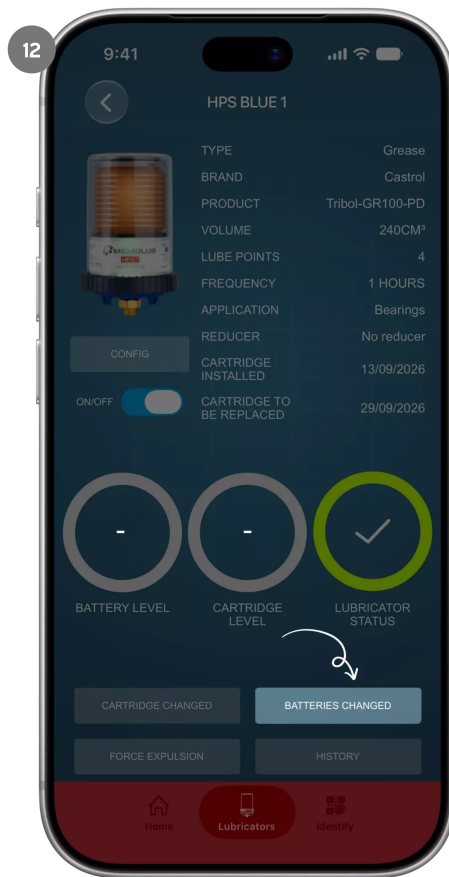


First, tap "Battery Changed" to set the level to 100%.

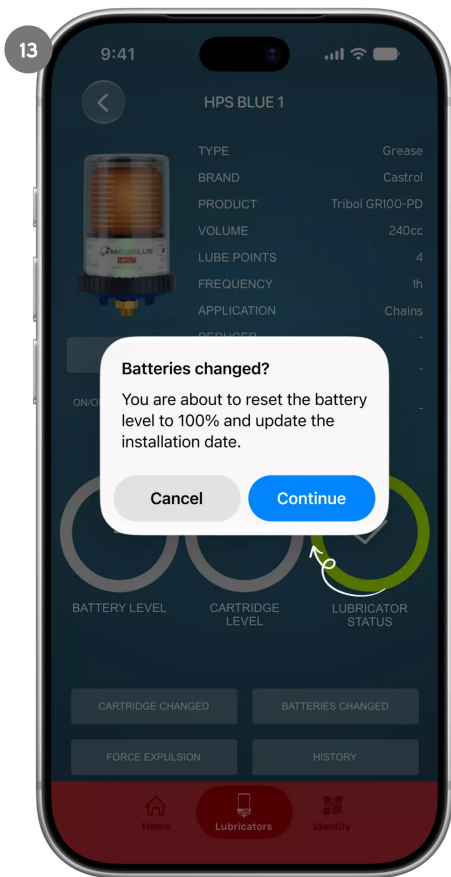


You have installed new batteries on installing the lubricator, please confirm.

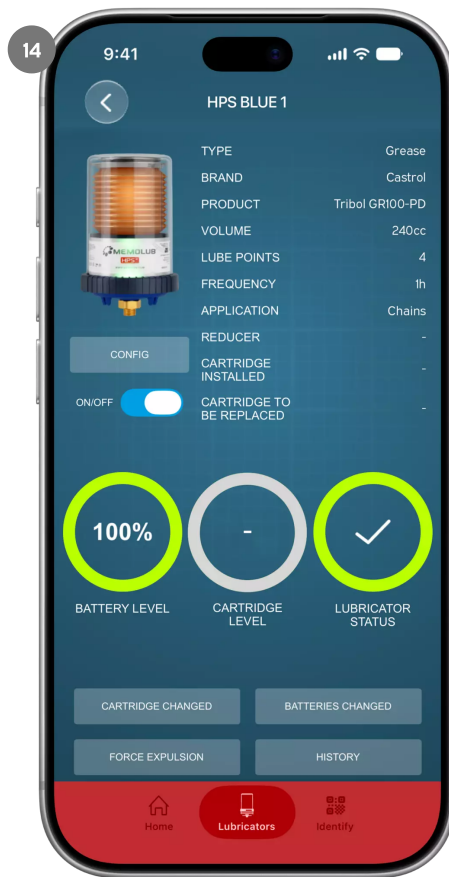


The battery level is now set to 100%.

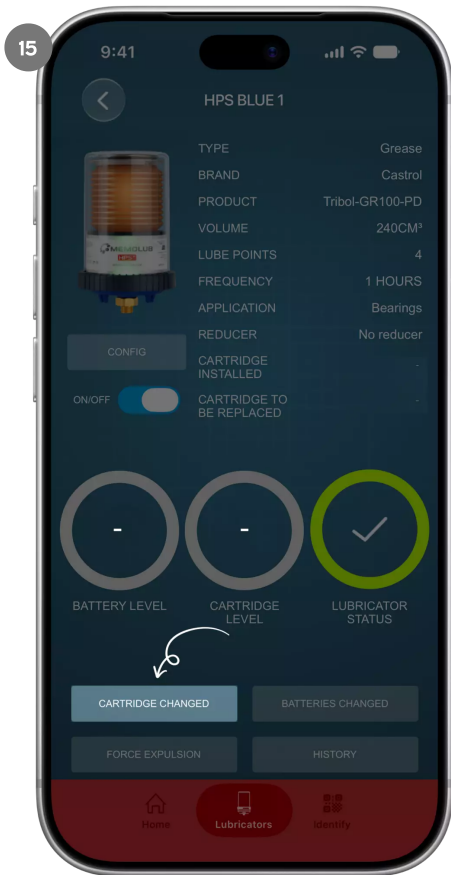

Secondly, tap "Battery Changed" to set the installation date of the cartridge.

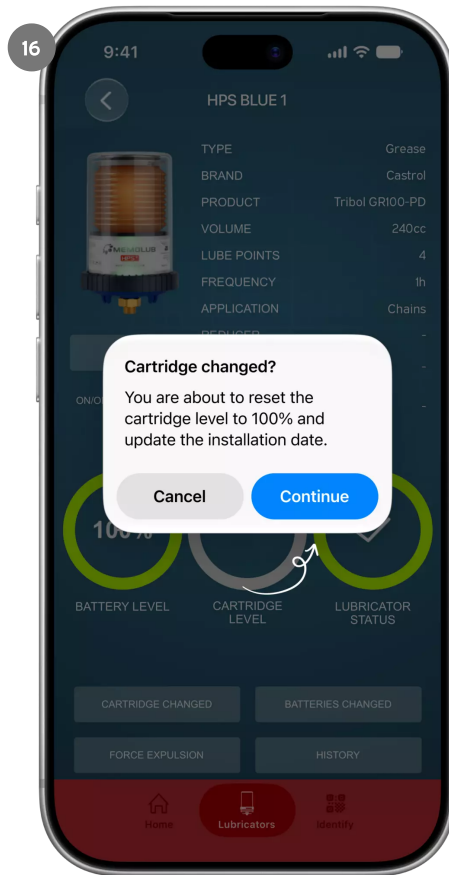


You have installed new cartridge when installing the lubricator, please confirm.

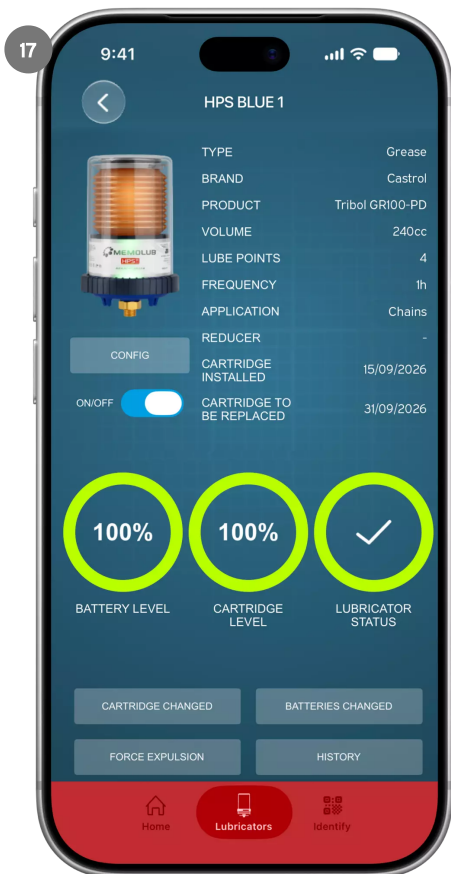


The cartridge level is now set to 100%, the installation and replacement dates are set. You have completed the initial setup.


Changing the setup of your lubricator

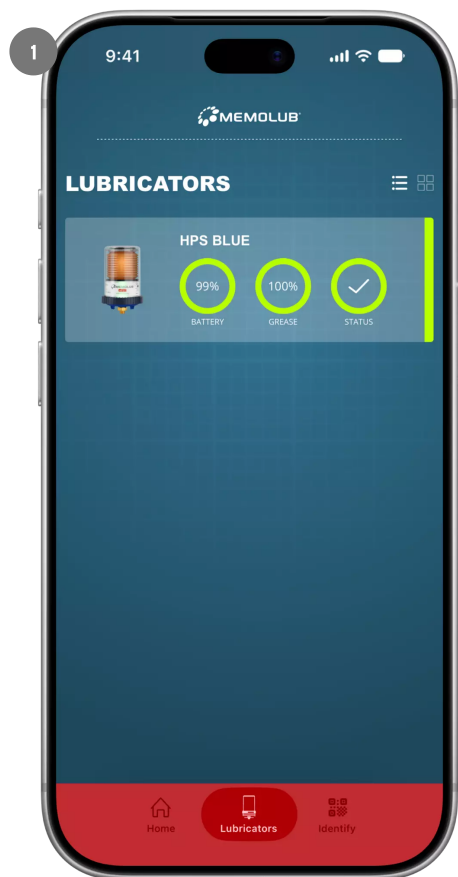


Select the lubricator you want to change from the list.

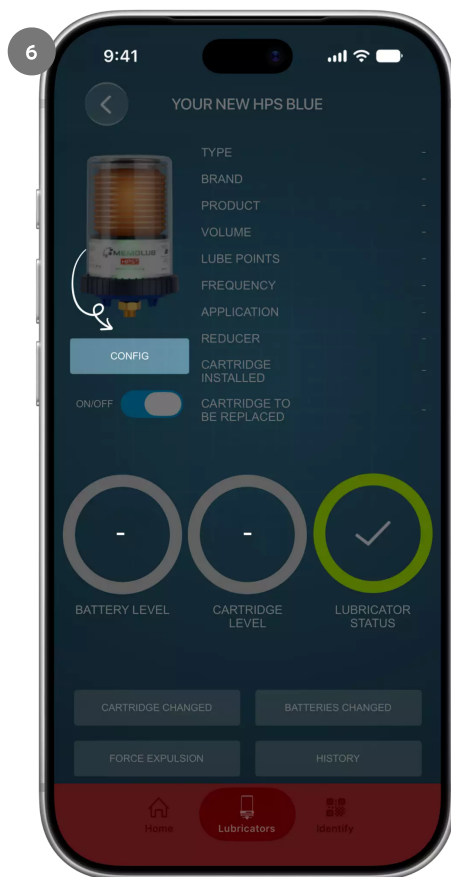


Tap the config button to alter the lubricator's configuration.

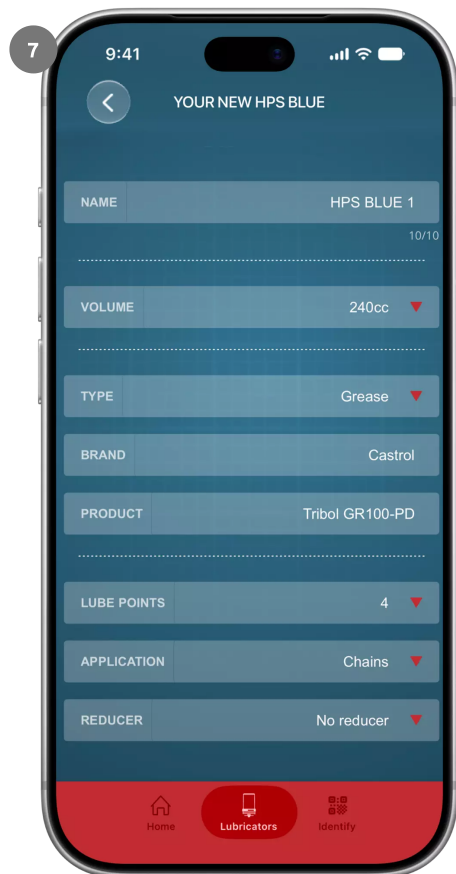


Change the values from the details list as preferred: name, volume, lubricant type, lubricant brand, product, lube points, application and the number of installed reducers.

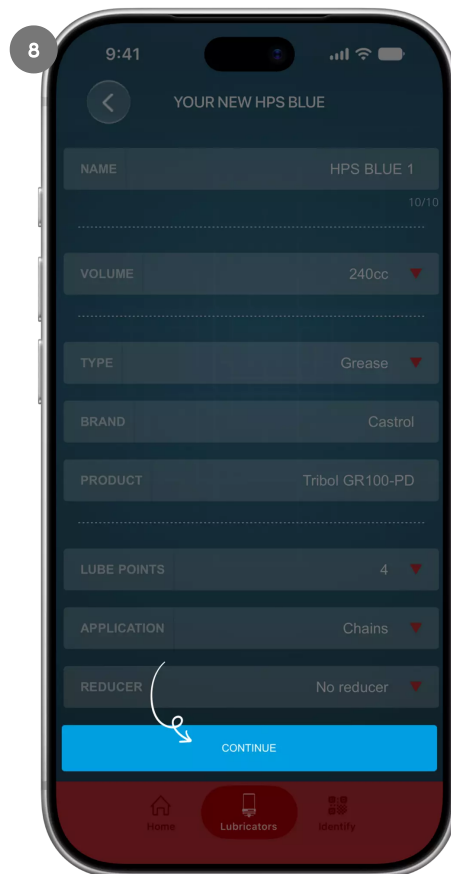


Proceed by tapping "Confirm".

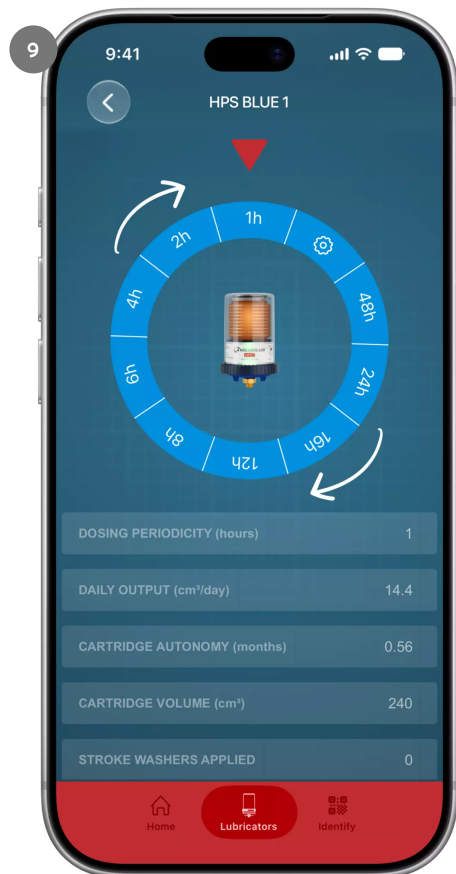

Alter your preferred preset frequency setting, or configure one yourself by moving the wheel to the gear icon.

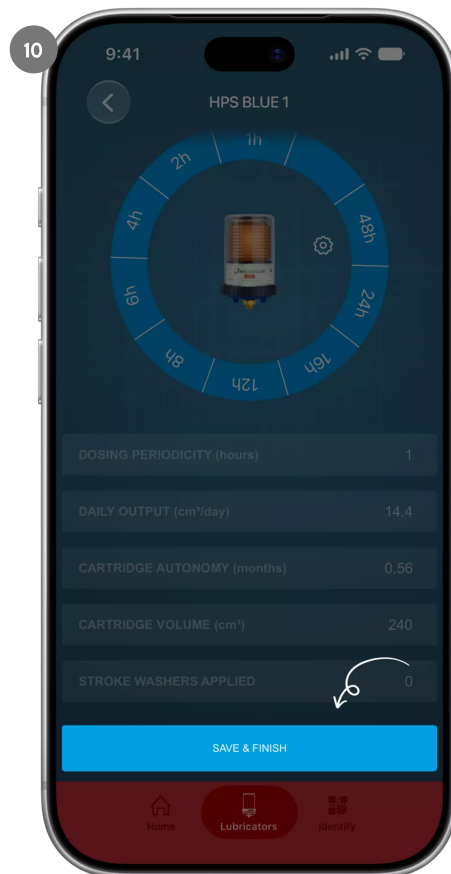

Tap the "Save & Finish".

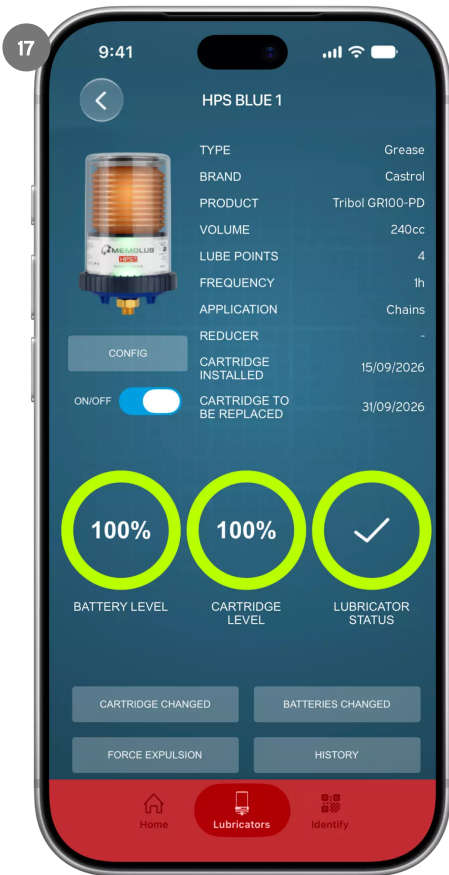

You have completed the setup change.